


UHPPOTE

2.4-inch TFT RFID

HBK-A04T

Access Control Terminal

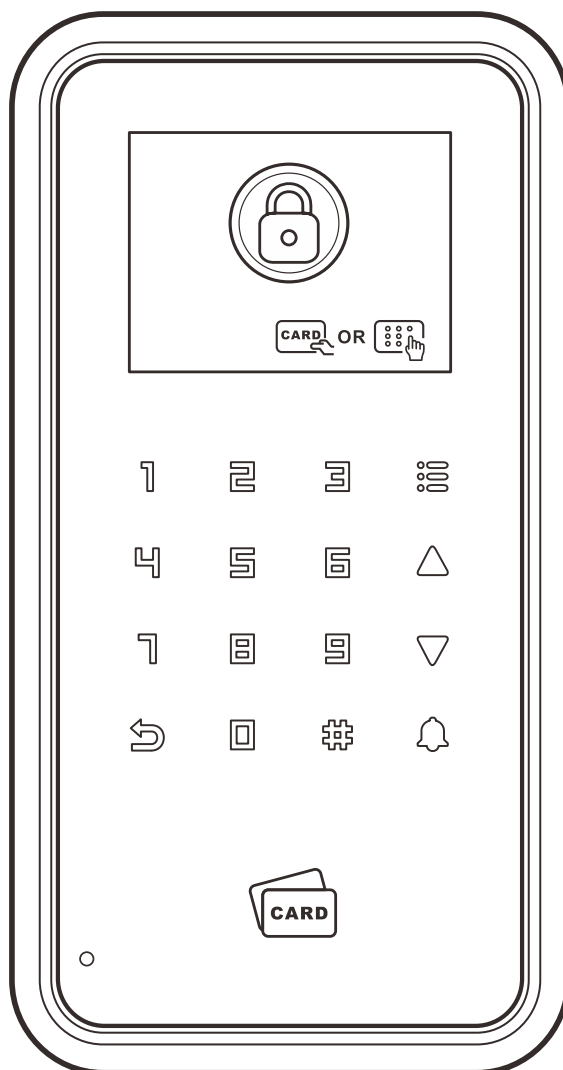

USER MANUAL










Contents

1.Safety Precautions	2
2.Features	3
3.Specifications	3
4.HBK-A04T Access Control Terminal	4
5.Installation	4
6.Wiring Diagram	5
7.Main Menu	6
8.Add Users	6
8.1 Card Users	7
8.2 Code Users	7
9.Delete Users	7
9.1 Delete by Card	7
9.2 Delete by User ID	8
9.3 Delete by Card No.	8
9.4 Delete all Users	8
10.Door Setup	9
10.1 Open Mode	9
10.2 Time Delay	9
10.3 Multi-card Access	9
10.4 Output Mode	10
11.Device	10
11.1 Anti-tamper Alarm	10
11.2 Sounds	10
11.3 Backlight	11
11.4 Screen Sleep	11
11.5 Language	11
12.Settings	11
12.1 Admin Card	11
12.1.1 Admin Add Card	11/12

12.1.2 Admin Delete Card	12
12.1.3 Delete Admin Card	12
12.2 Admin Code	12
12.3 Public Code	13
12.4 WiFi Match	13
12.5 Factory Reset	13
13.Information	13/14
14.Other Functions	14
14.1 Reset Button	14
14.2 Tamper Alarm Button	14
15.Tuya Smart APP Operation Guide	15/18
16.FCC Warning	18/19

1. Safety Precautions

The following precautions are to keep users safe and prevent any damage. Please read carefully before installation.

-  Do not install the device in an area subject to direct sunlight, humidity or dust.
-  Do not place a magnet near the device. Magnetic field from magnets, TV, monitor or speaker may damage the device.
-  Do not place the device next to a heating equipment.
-  Prevent any liquid such as water, milk or chemicals from leaking into the device.
-  Do not let children touch the device without supervision.
-  Do not drop the device.
-  Do not disassemble, repair or alter the device.
-  Do not use the device for any purpose other than specified ones.
-  To keep the device clear, please wipe it with a soft towel or cloth to remove dust; do not use water for cleansing.


2. Features

- Built-in 2.4" color display.
- All features are programmed directly from the keypad – no need for an external programmer.
- Intelligent RFID card induction module, read the card quickly to unlock the lock.
- Ultra-low power consumption, the standby current is less than 50mA.
- Support Card Only, Code Only, Card + Code, Card or Code, mobile app five different door opening modes.
- With doorbell button, supports to connect external bell.
- Backlit keys for easy nighttime use.
- Widely used in building, hospital, urban rail transit, data center, enterprise park and other fields.

3. Specifications


Display: 2.4" TFT	Resolution: 320 X 240
User Capacity: 2000 card, 500 code	Card Type: ID card
Operating Voltage: 12VDC	WiFi Standard: 2412-2462MHz
Operating Temperature: -22°F-140°F	Card Frequency: 125KHz
Door Open Time: 0-99s (adjustable)	Static Current: 50mA
Operating Humidity: 10%–90%RH	Enclosure Material: ABS Plastic
Panel Material: PC	Product Weight: 7.05oz
Dimensions: 6-1/8" x 3-11/64" x 1-33/64"	
Door Open Mode: Card Only, Code Only, Card + Code, Card or Code, mobile app	
Reading Distance: Max. 2-23/64" (related to card type and working environment)	

4. HBK-A04T Access Control Terminal

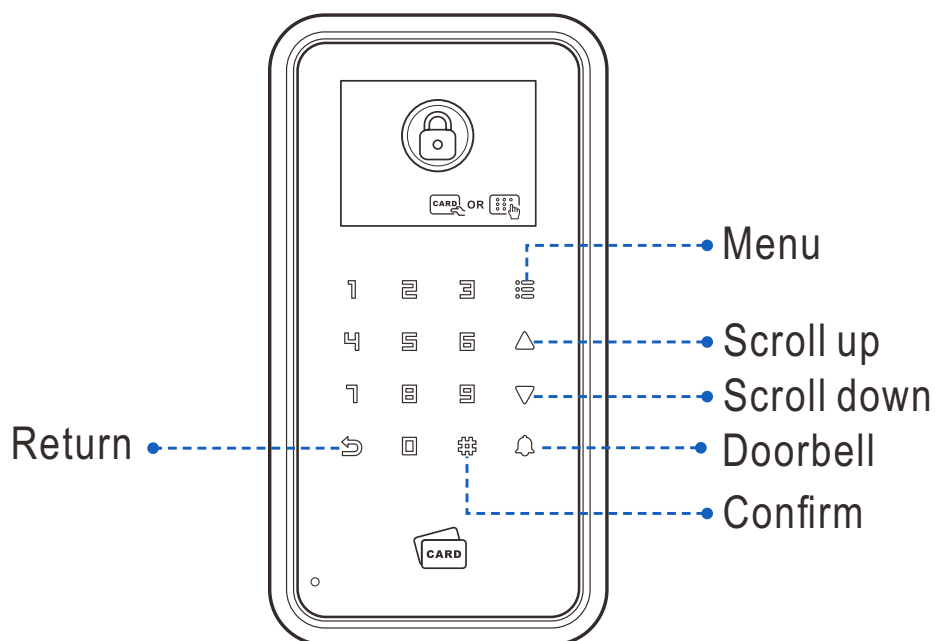


5. Installation

- Remove the back cover from the keypad
- Drill 4 holes on the wall for self-tapping screws and 1 hole for the cable
- Put the supplied plastic anchors into the 4 holes
- Fix the back cover firmly on the wall with 4 self-tapping screws
- Thread the cable through the cable hole
- Attach the keypad to the back cover

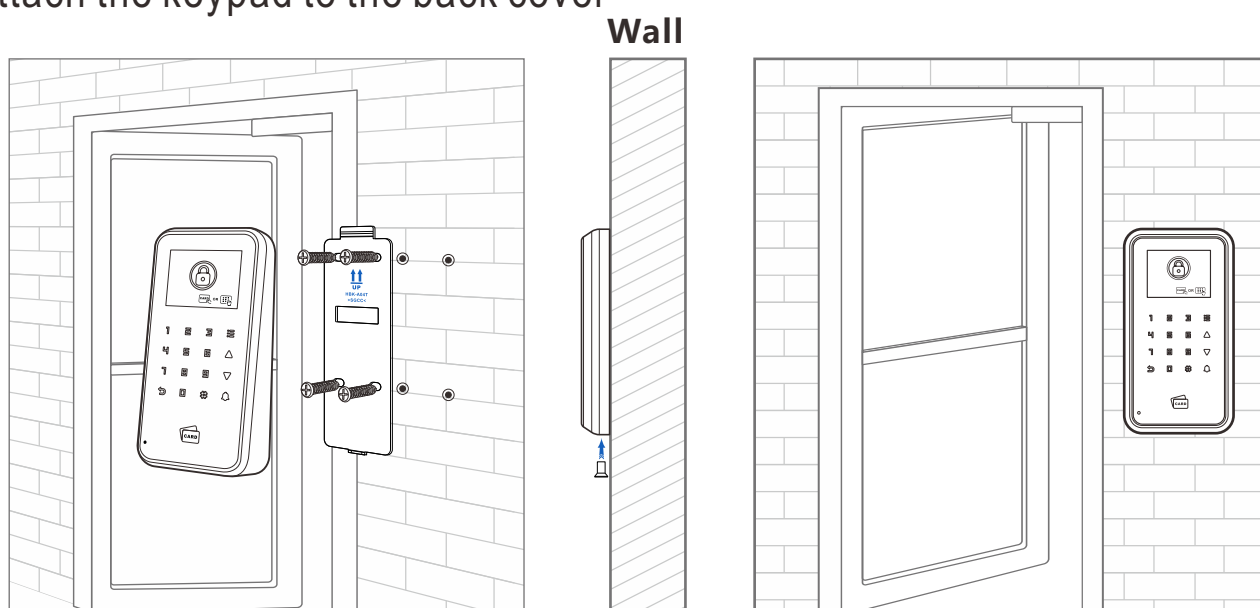


6. Wiring Diagram

1) Common Power Supply Diagram

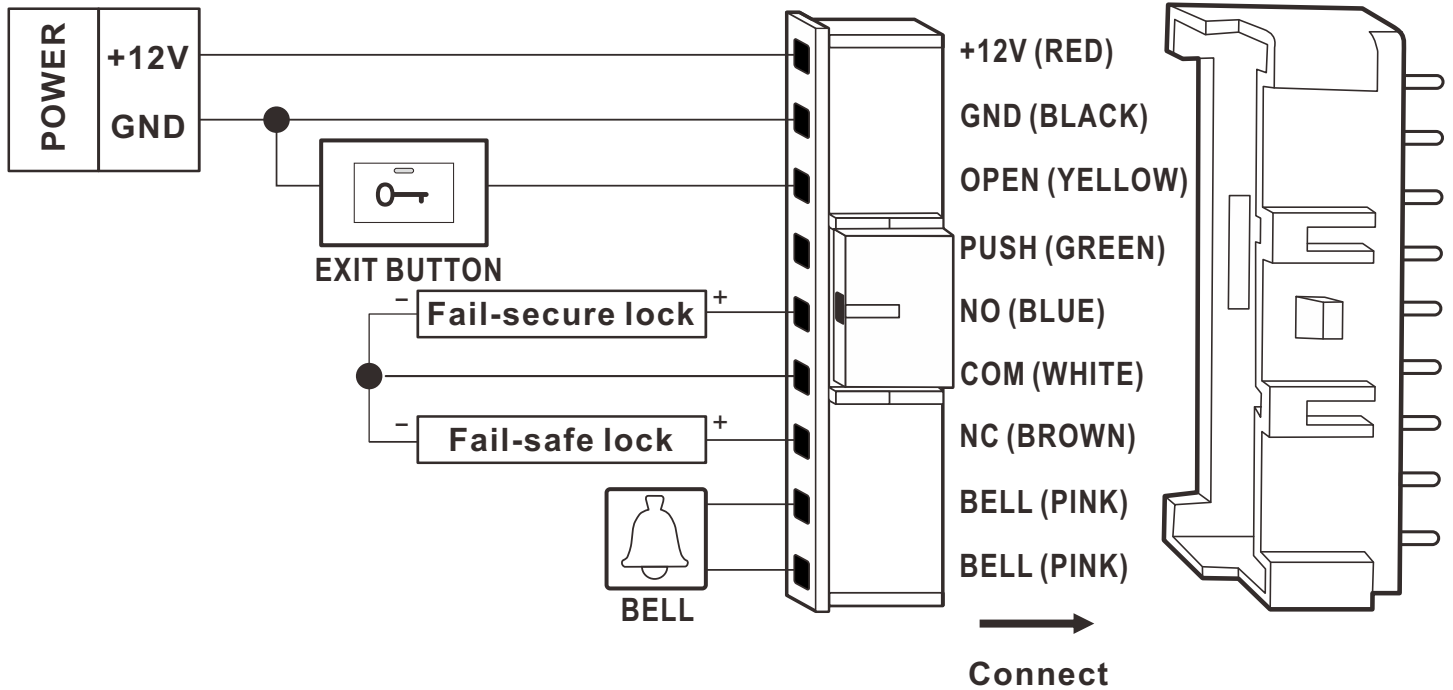


2) Special Power Supply Diagram

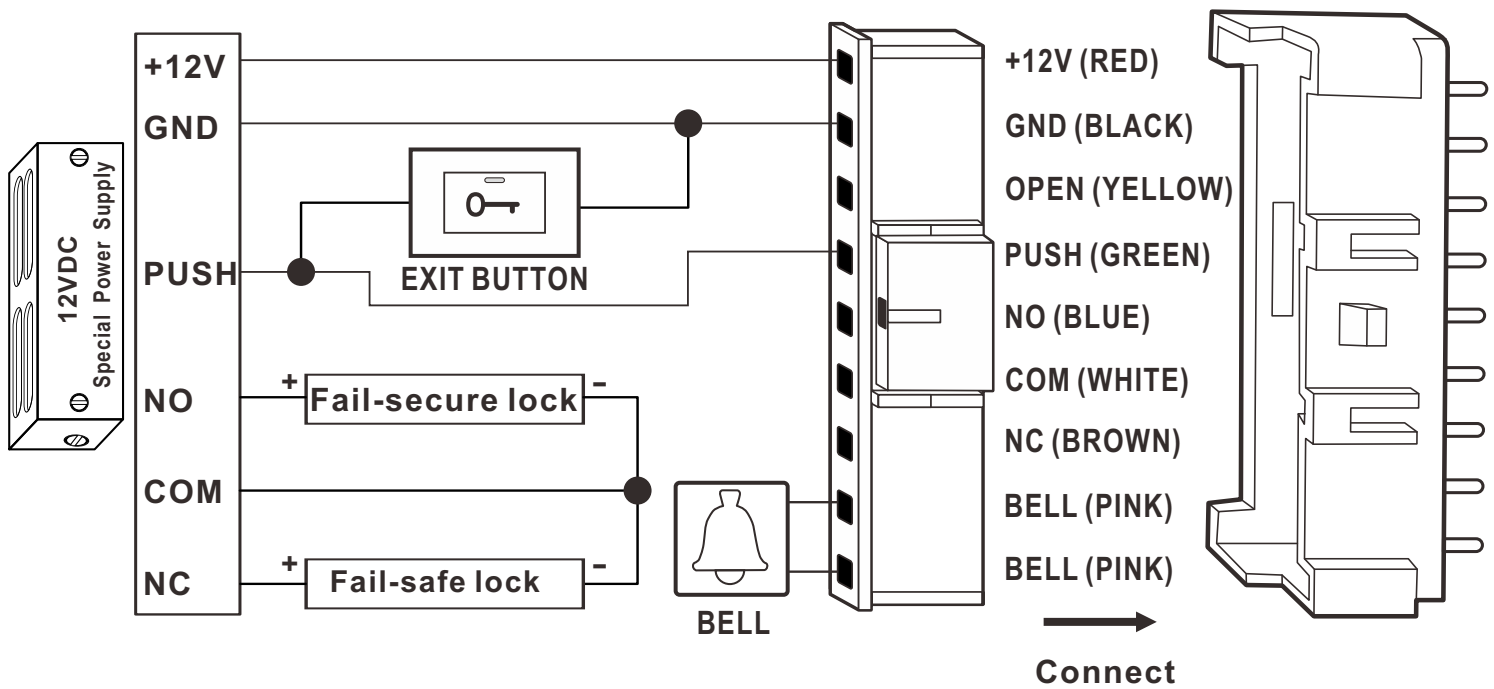

7. Main Menu

When the device is in stand-by mode, tap  and select 'Admin' to enter the main menu.

Default admin code is 123456

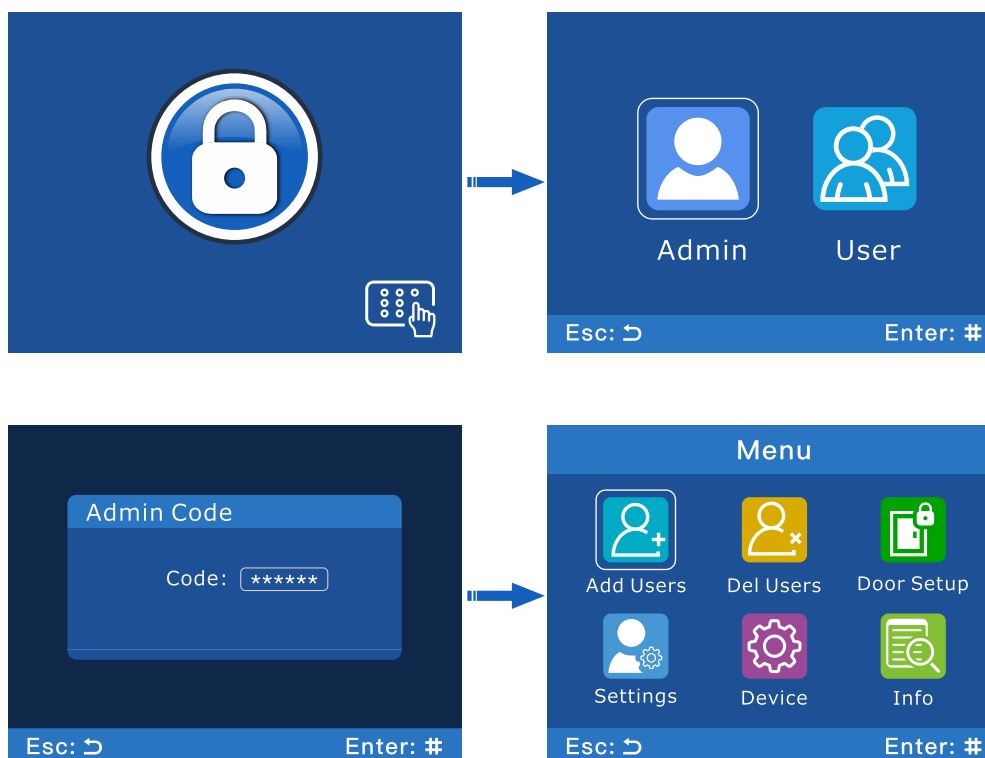

Add Users: Add card user or code user

Del Users: Delete users by card, user ID or Card No., also can delete all users.

Door Setup: Set open mode, door open time, output mode and multi-card access.

Settings: Set anti-tamper alarm, buzzer, backlight, screen sleep and language.

Device: Set admin card, admin code, public code, Wi-Fi and factory reset.


Info: View the quantity of users and device version.

8. Add Users


Tap  > Add Users to enter [Add Users] interface.

The users can be added continuously. And the device automatically allocates an User ID starting from 0001 to 9999 for every user in sequence.

8.1 Card User

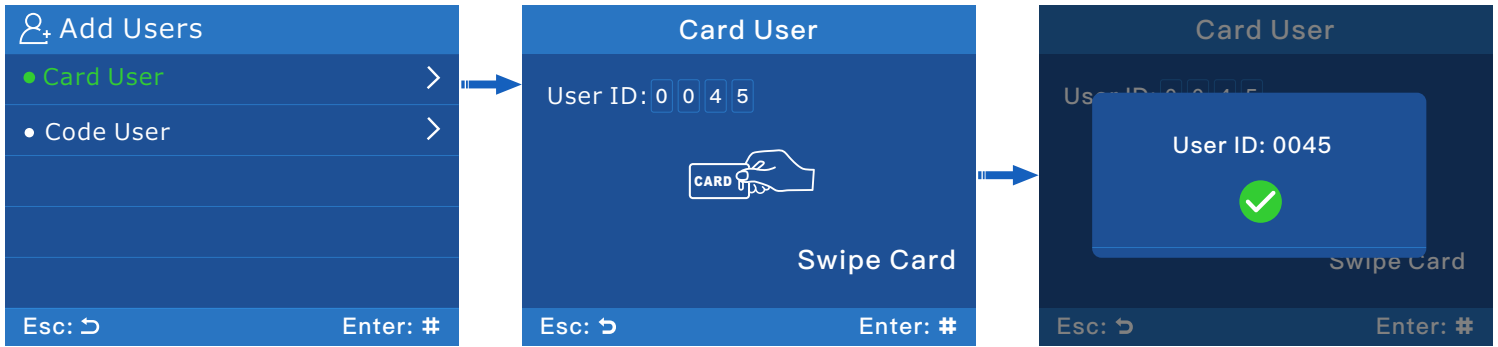

Enter [Card User] interface, swipe card on the card sensor.
 If the users was added already, an interface shown below.

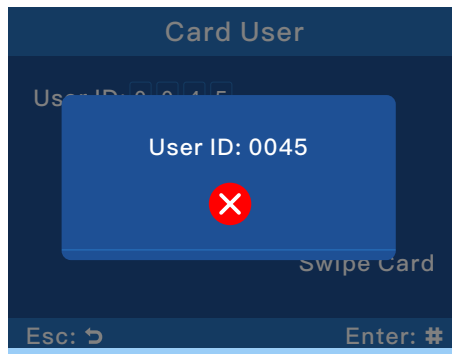

8.2 Code User

The length of code is 4-8 digits.




9. Delete Users

Tap > Del Users to enter [Del Users] interface.


9.1 Delete by Card

Swipe card on the card sensor.

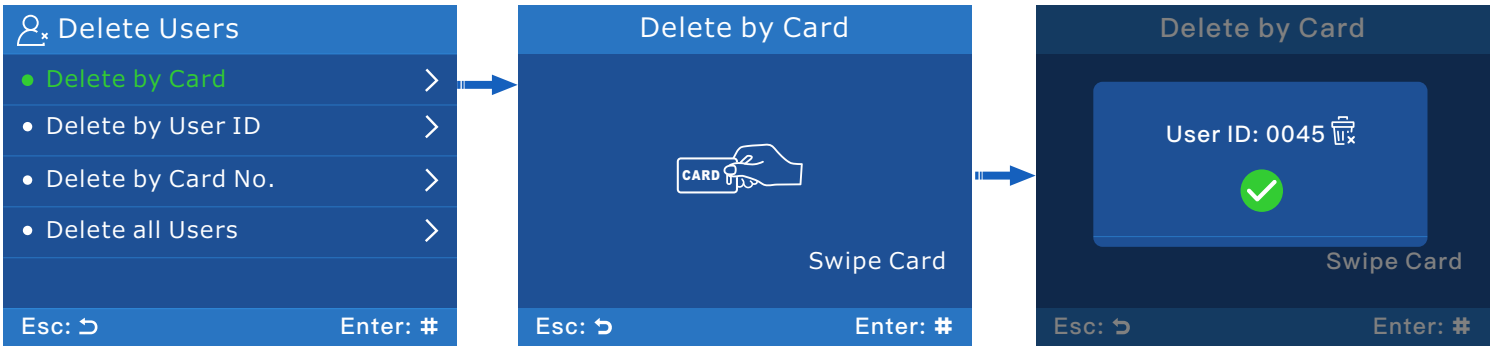


9.2 Delete by User ID

Input the 4-digit user ID.

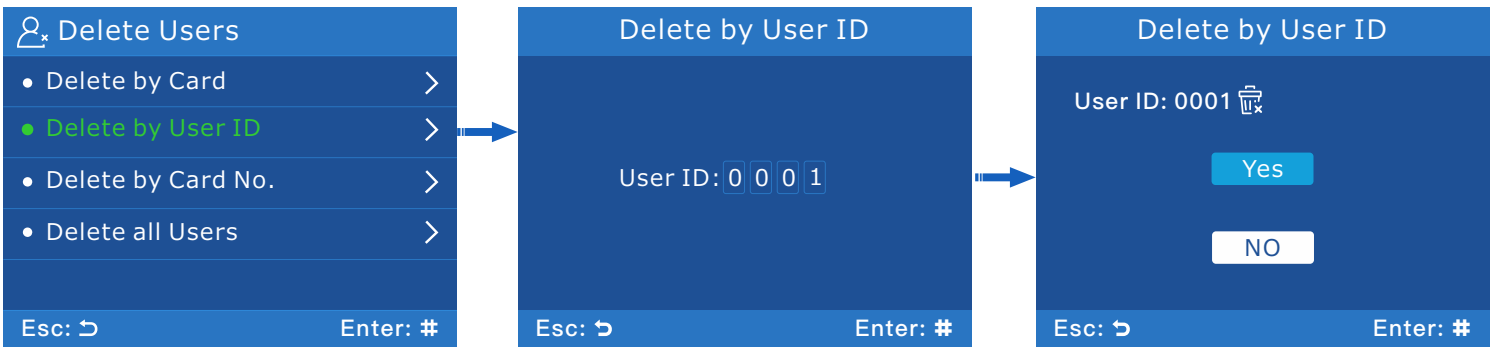


9.3 Delete by Card No.

Input the card number on the card.

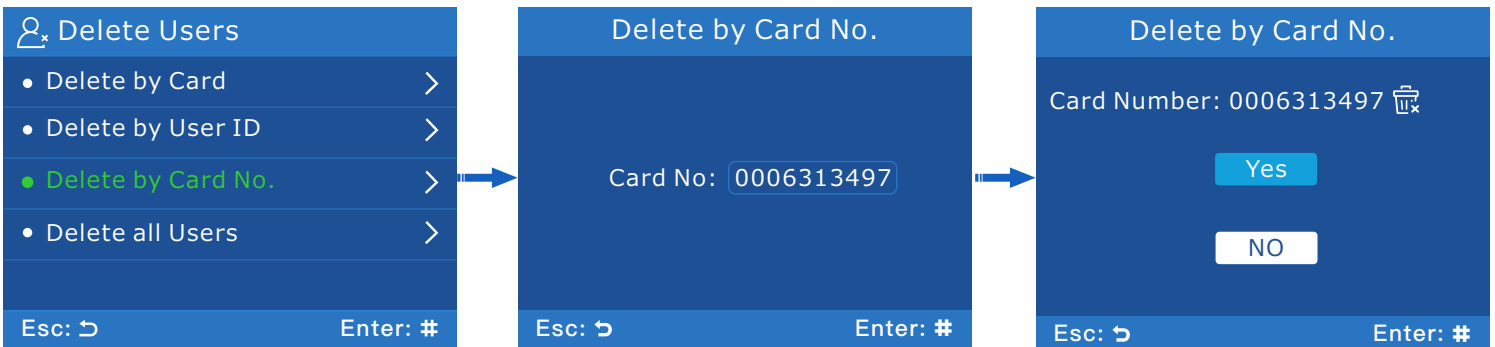

9.4 Delete all Users


Attention: Delete all card and code users, please operate carefully.

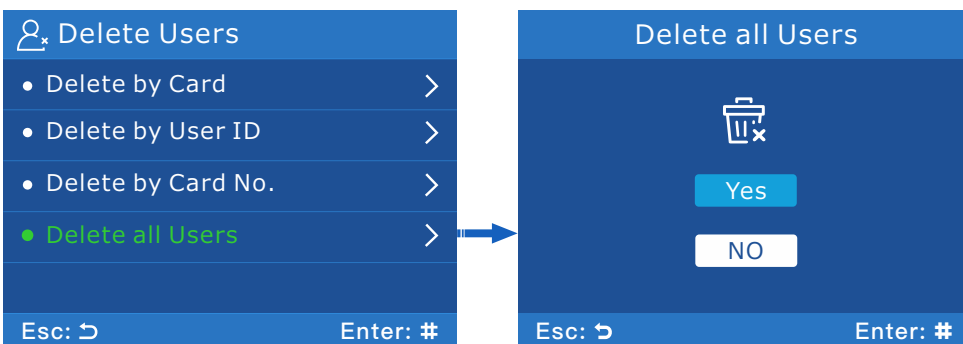

10. Door Setup

Tap  > Door Setup to enter [Door Setup] interface.

10.1 Open Mode

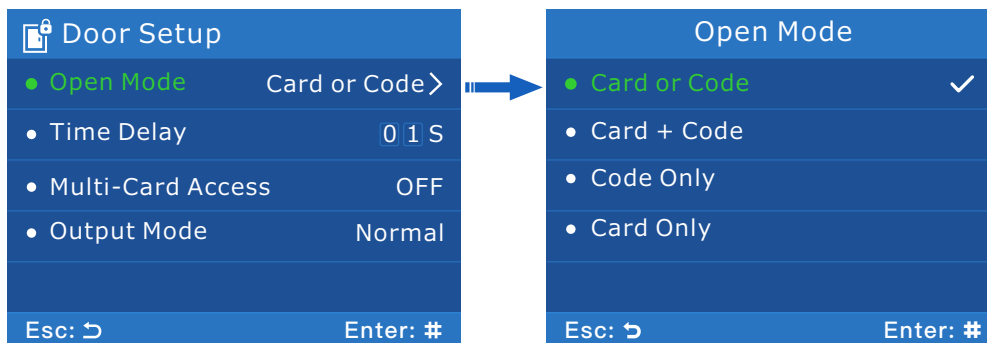


Card or Code: Entry is by either card or code. (default)

Card + Code: Entry is by card and code together.

Code Only: Entry is by code only.

Card Only: Entry is by card only.

10.2 Time Delay

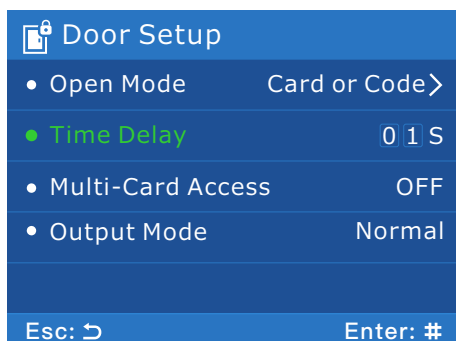


Select Time Delay and enter the time.

The device supports 0-99s time delay.

10.3 Multi-card Access


Only for Card Only mode. The door will open when the quantity of valid cards readed.

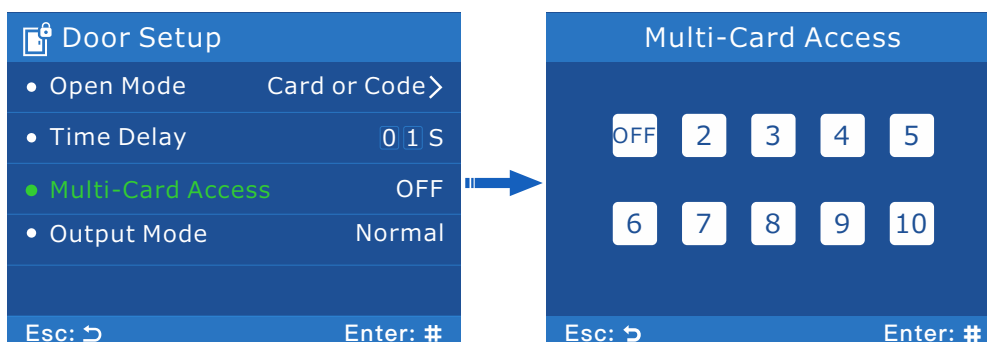

10.4 Output Mode

Normal Mode: The door will lock automatically after an unlock operation.

Toggle Mode: The door will keep unlocking until next unlock operation.

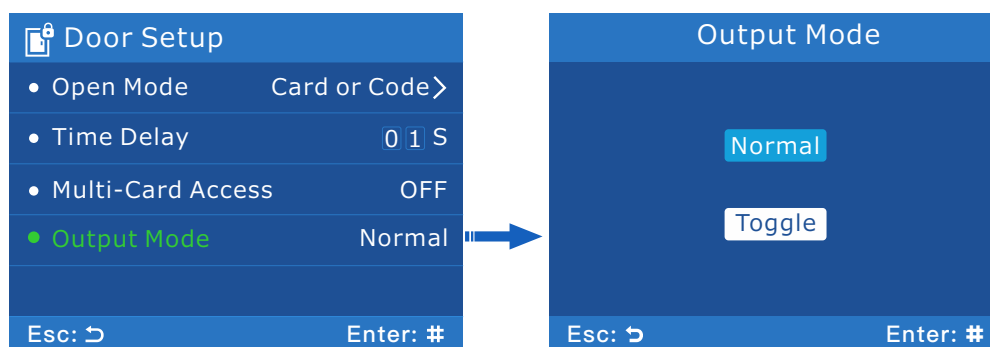


11. Device


Tap > Device to enter [Device] interface.

11.1 Anti-tamper Alarm


Tamper alarm button is located at the back of the device.

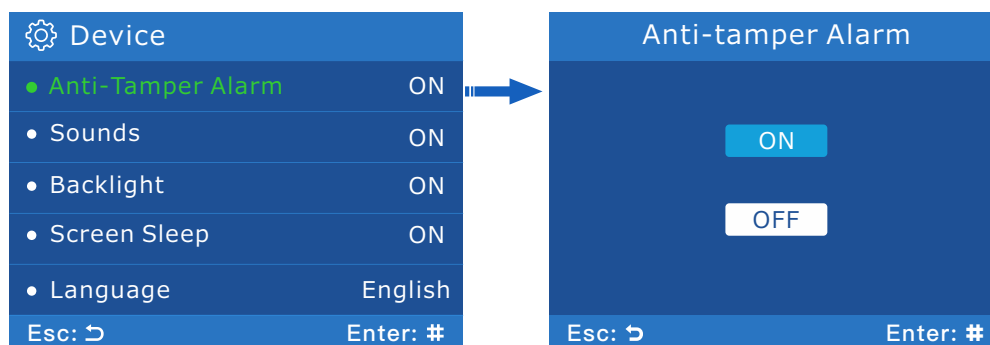


11.2 Sounds

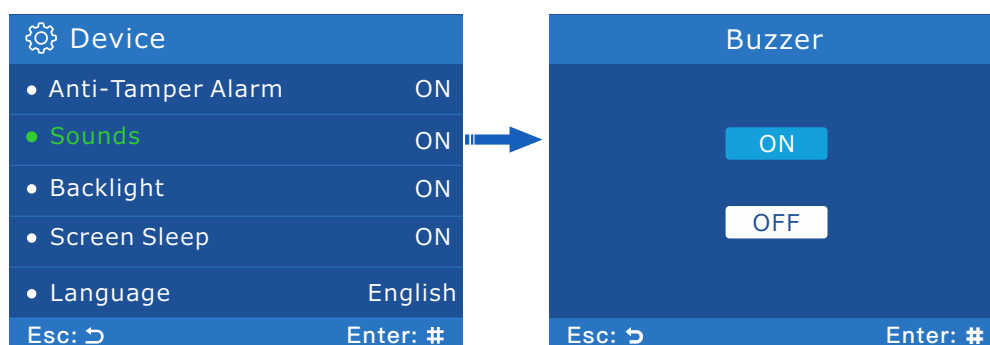

11.3 Backlight

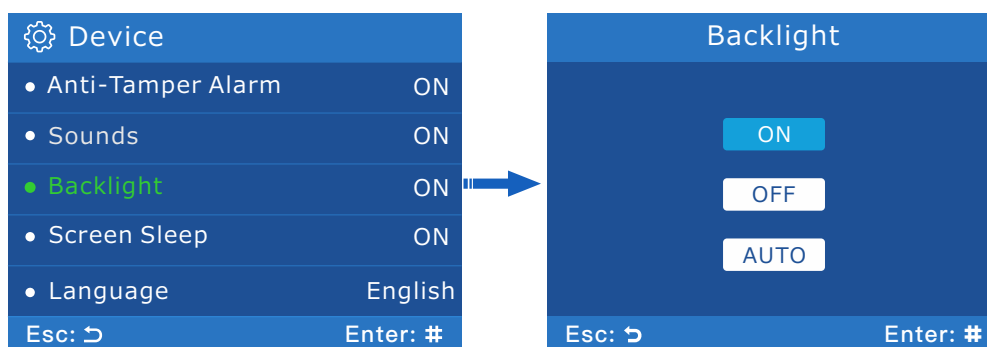


11.4 Screen Sleep

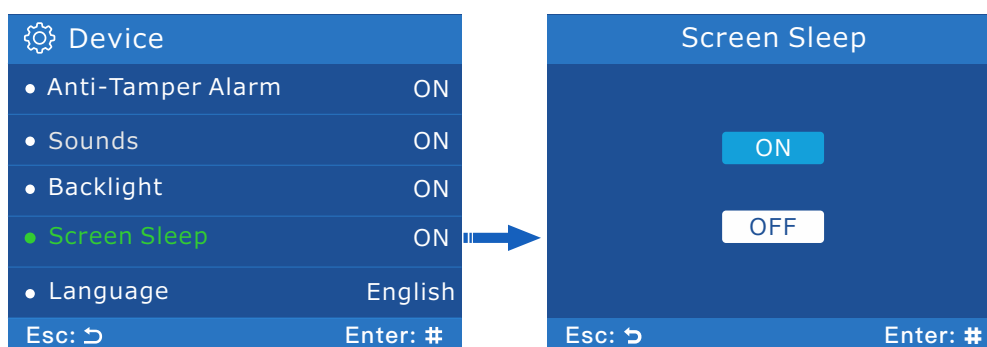

11.5 Language

Support English and Chinese.

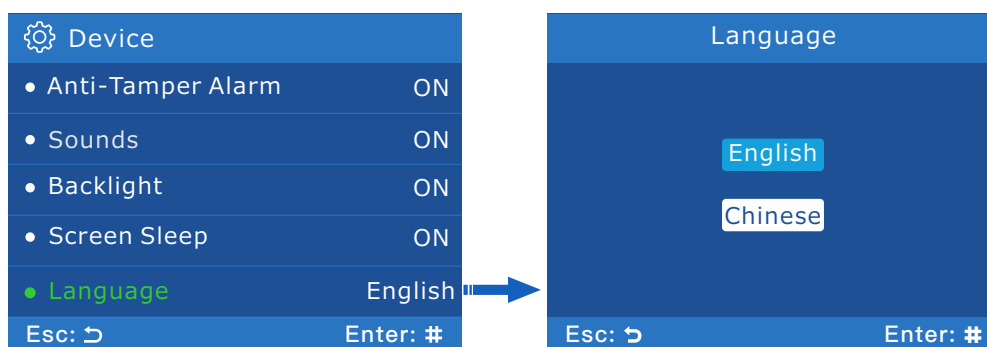


12. Settings

Tap  > Settings to enter [Settings] interface.


12.1 Admin Card

The device supports one admin add card and one admin delete card each.


12.1.1 Admin Add Card

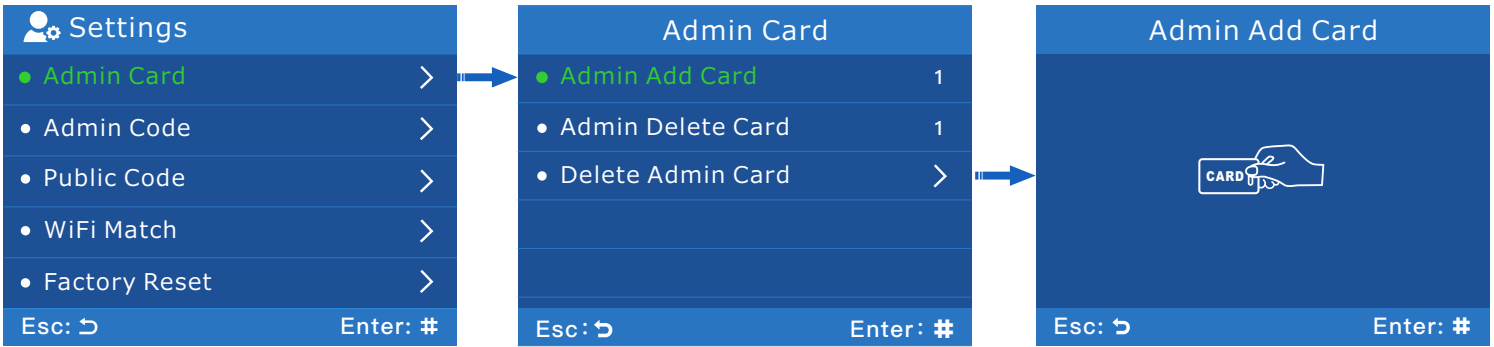

12.1.2 Admin Delete Card

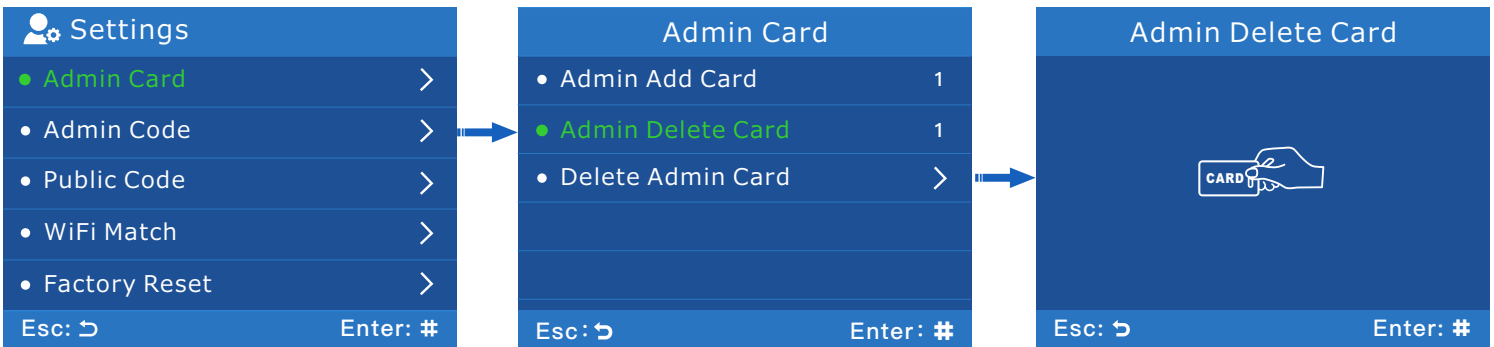


12.1.3 Delete Admin Card

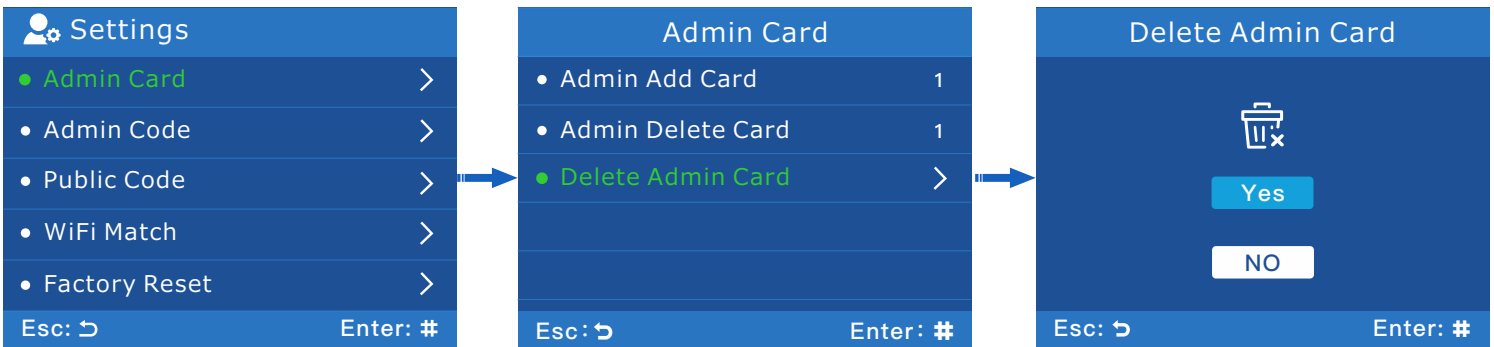

12.2 Admin Code

The default admin code is 123456.

The new admin code can be 4-8 digits.

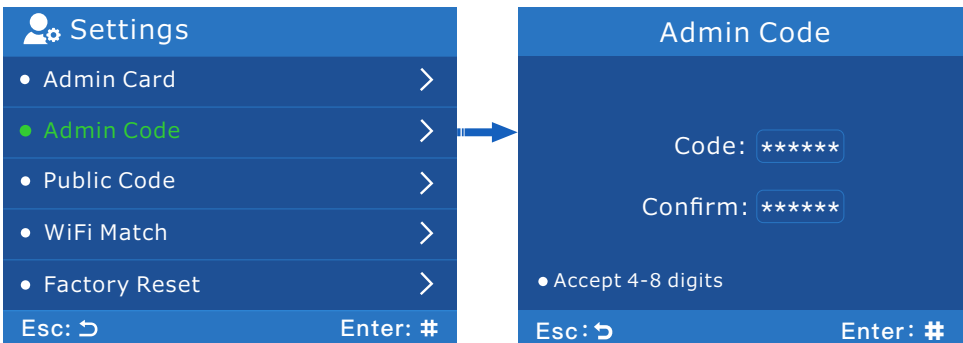

12.3 Public Code

The device supports one public code which can be used to open the door in any open mode.



12.4 WiFi Match

Compatible with 2.4GHz Tuya Smart, for more information please refer to 'Tuya Smart APP Operation Guide' in this manual.



12.5 Factory Reset

Factory Reset includes access control parameter, system parameter and so on.



13. Information

Tap:☰ > Info to enter [Information] interface.

This interface can view the quantity of registered users and device version.


Info	
• Total Users	7/2500
• Card Users	5/2000
• Code Users	2/500
• Admin Card	1/2
• Version	A04T V1.0
Esc: ↵	Enter: #

14. Other Functions

14.1 Reset Button

To restart the device by the Reset Button when the device cannot operate normally.

1. Find a tool with a tip's diameter less than 2mm.
2. Find the hole with a mark 'Reset' on the bottom of the device, as shown in the figure below.
3. Insert the tool into the hole, take out the tool when the device is shut down, and then the device will be restarted.

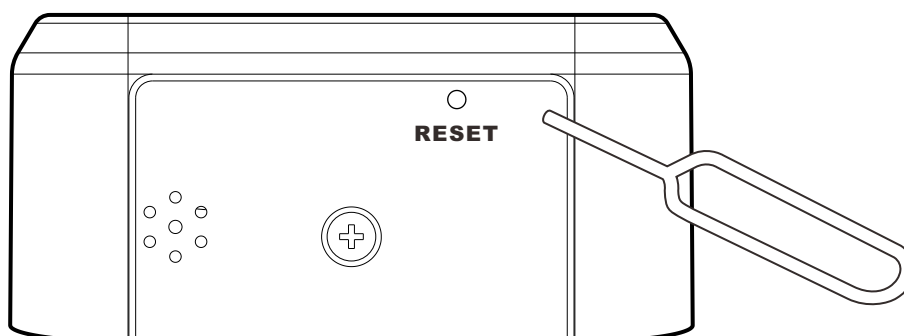


14.2 Tamper Alarm Button

Tamper alarm Button is located at the back of the device.

As the button is pressed by the back plate when the device is installed properly, if the device is dismantled from the back plate, the Tamper Alarm will be triggered.


Canceling Alarm

Install the device properly, press  to enter main menu interface, 'Anti-Tamper Alarm' will shown on the interface, choose OFF to close the alarm.

Tuya Smart APP Operation Guide

1. Download Tuya Smart APP



Search 'Tuya Smart' in Apple Store for iOS version or Google Play for Android version.

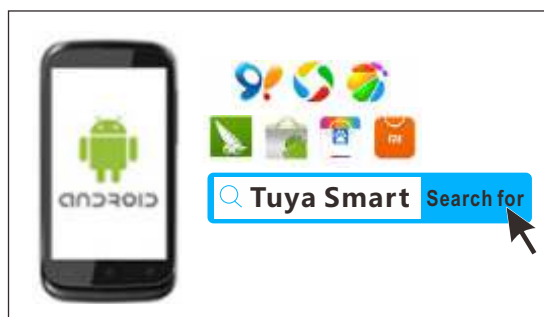

2. Registration and Login


Tap 'Register' on the top-right corner, then input a valid mobile number or email address and tap 'Get Verification Code'.

Enter verification code and set password, tap 'Done'.

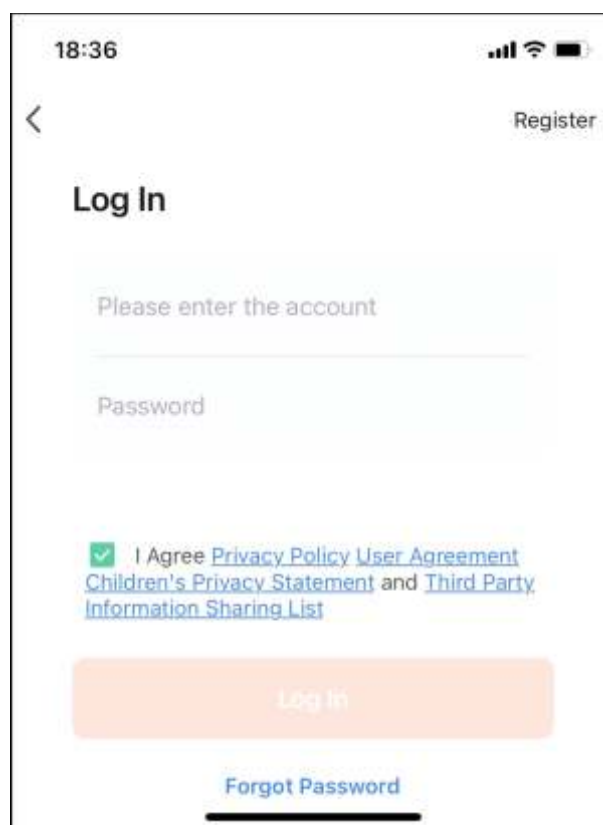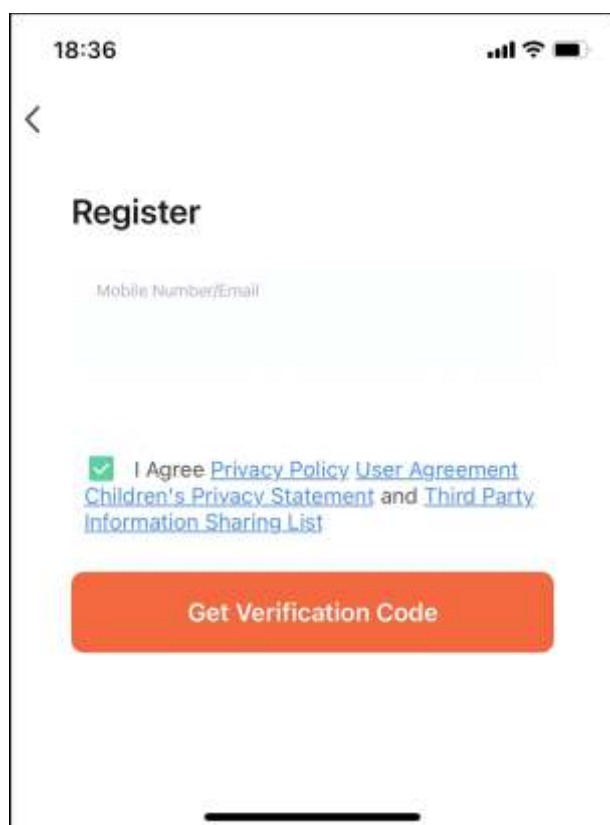


3. WiFi Pairing


Step 1. Tap WiFi Match>Yes on the HBK-A04T to enter pairing mode, it will take 30-180 seconds.

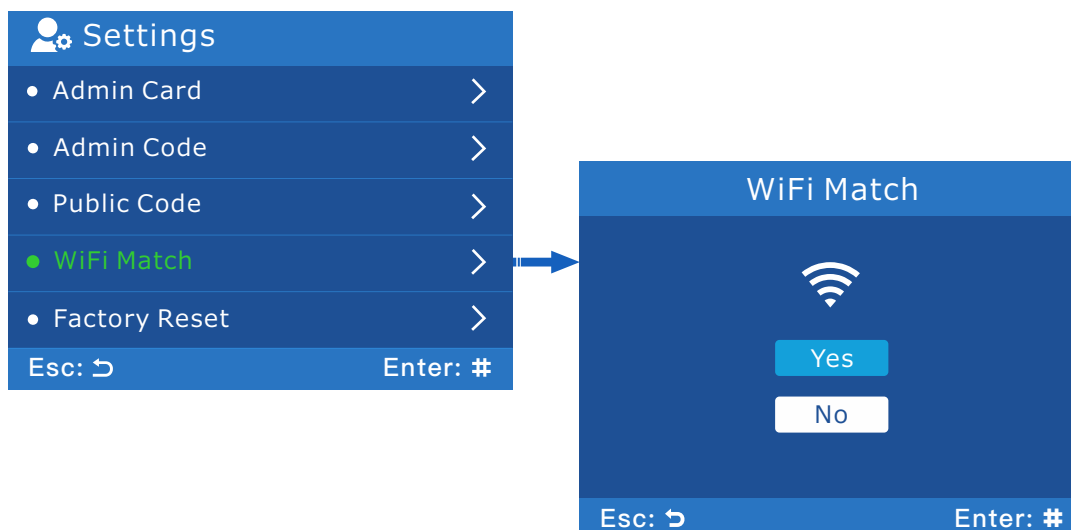

Step 2. Tap 'Add Device' on the home page of Tuya app followed by tap 'Add' to enter Wi-Fi information.

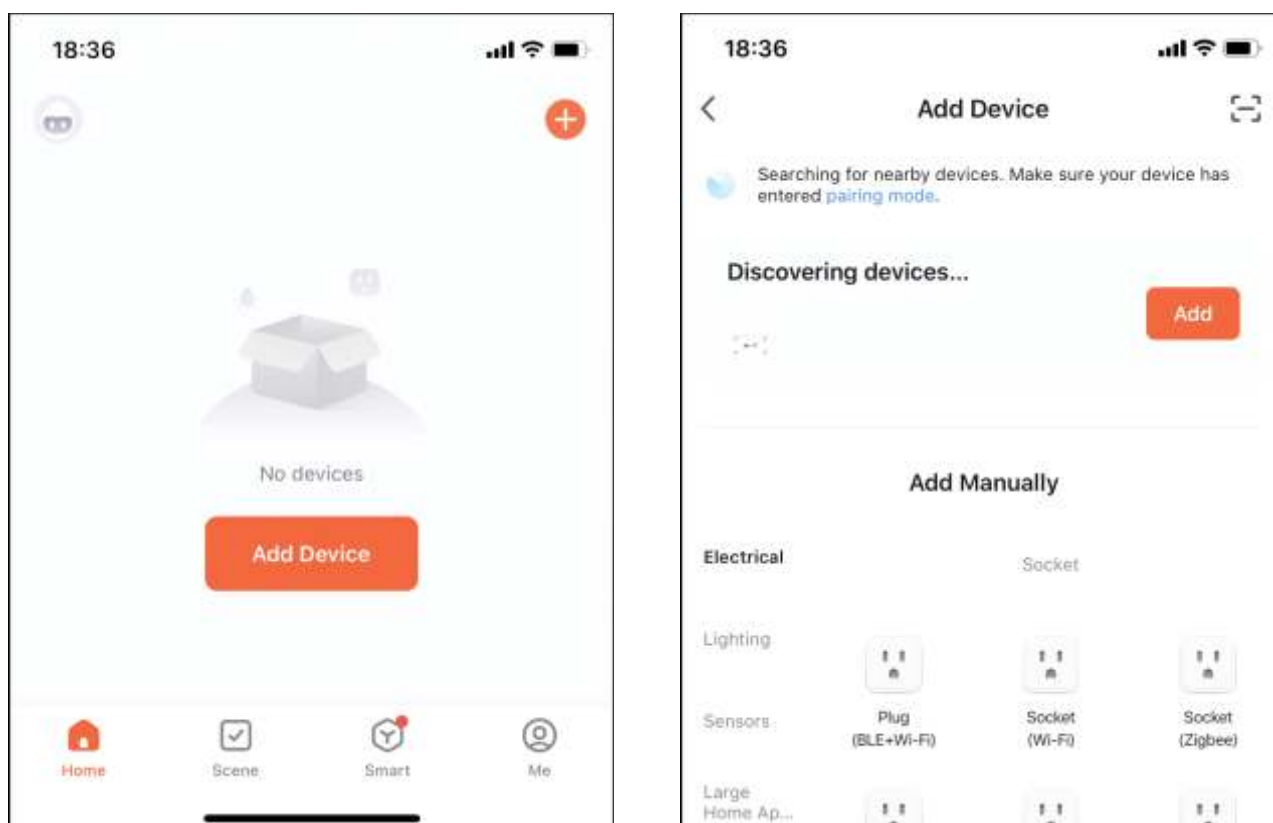


Step 3. Choose Wi-Fi and enter password.

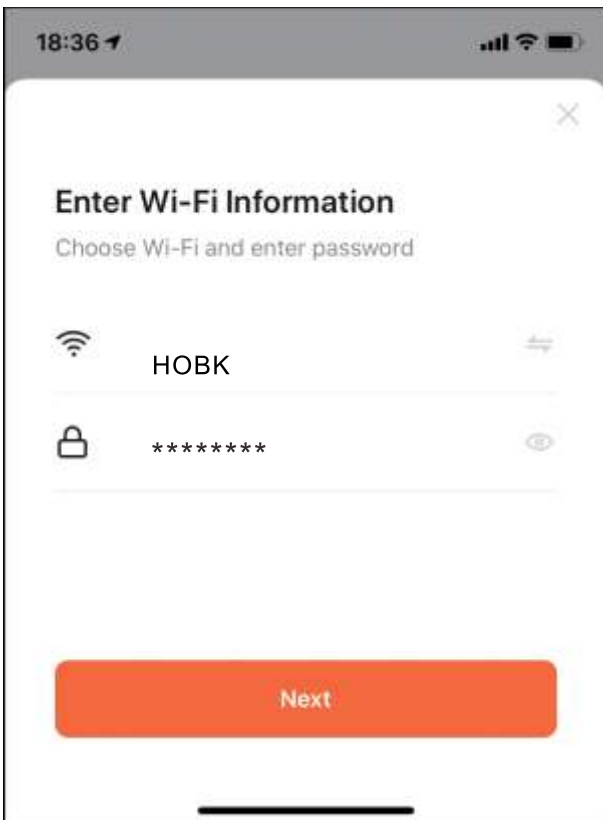



The Wi-Fi must be the same as the phone connecting, otherwise it will cause offline problem.

The Tuya Smart only supports 2.4GHz Wi-Fi communication protocol and can't support 5GHz.

Step 4. The Tuya Smart app will search for nearby device and connected to the HBK-A04T.

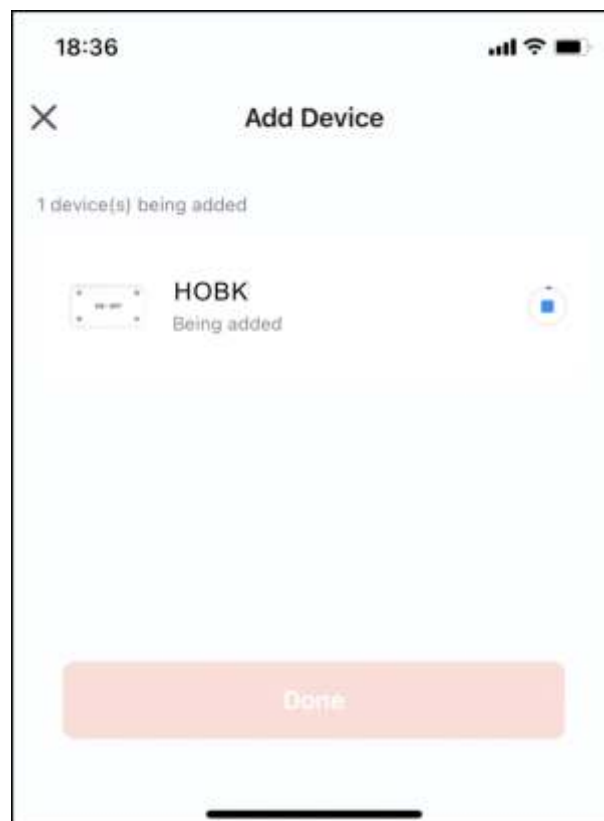

Step 5. Name the added device.

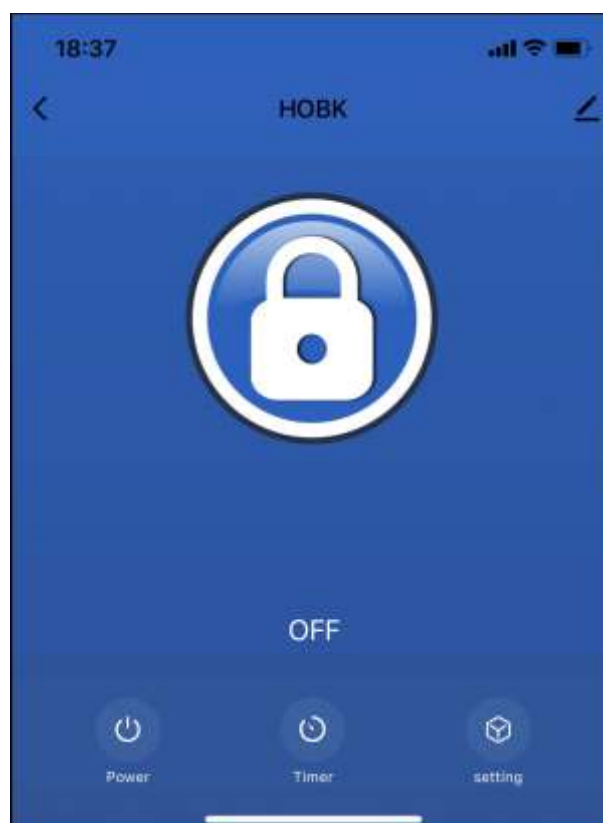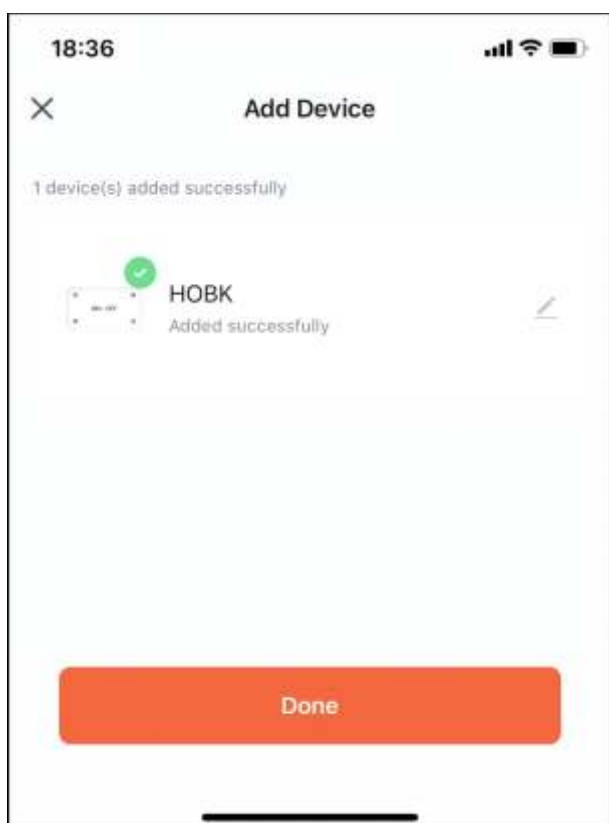

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

UHPPOTE

© 2023 HOBK Electronic Technology Co., Ltd

All rights reserved



>75% recycled paper